



IMPORTANT

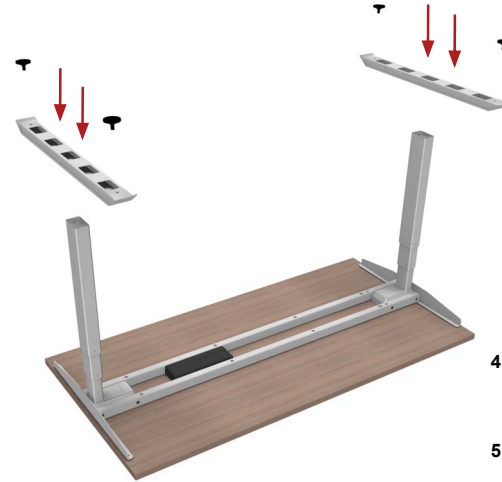

Regardless of the load, a load cycle of no more than 10% ~ 6 minutes of an hour or no more than 2 minutes of continuous operation. These values, listed in the datasheet **MUST NOT** be exceeded, it could lead to overheating of the motor, brake or nut on the piston rod. Exceeding the load cycle can result in a significant reduction in system life.

1. Crossbeams and control unit are already mounted on the table top.
2. Place the columns between the crossbeams.
3. Attach the table supports and fix them through the crossbeams to the column with 6 x 16 mm hex head screws.

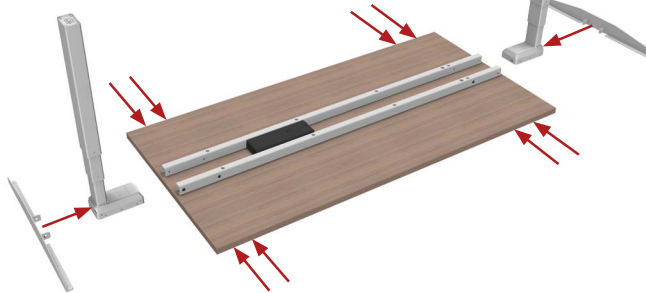

4. Attach the base to the columns and fix it with 6 x 16 mm hex head screws.
5. Fix the locking legs with screws.

6. Connect the power supply cables of the control to the columns.
7. Mount the table driver to the edge of the table top and connect it with control unit.
8. Before first use, move the table top to the lowest position. Then the table top can be moved up and down continuously.



Operation of the DPG series:

The desk panel is operated by tilting; Tilt and hold the DPG up to make the desk drive up, press and hold the DPG down to make the desk drive down. Release the DPG when you have reached your requested position.

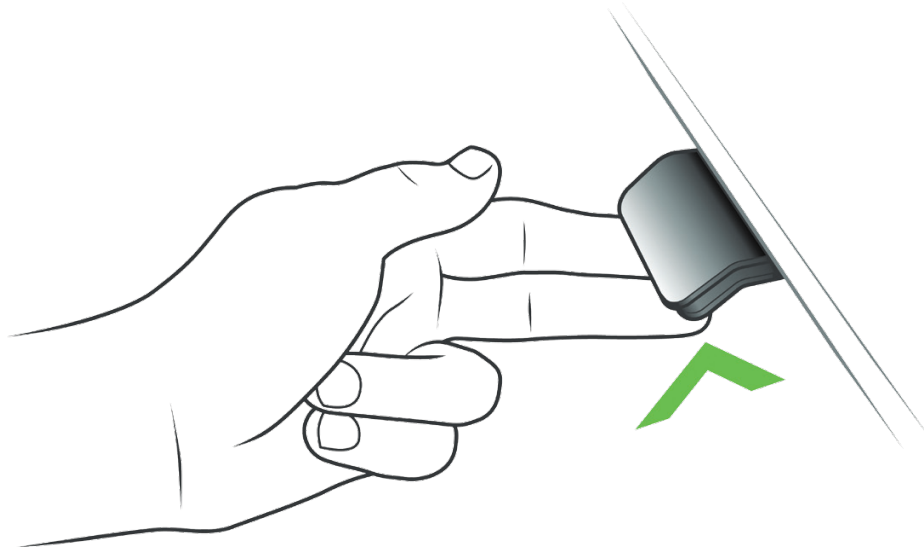


Figure 1: Tilt and hold the DPG1K to make the desk drive up

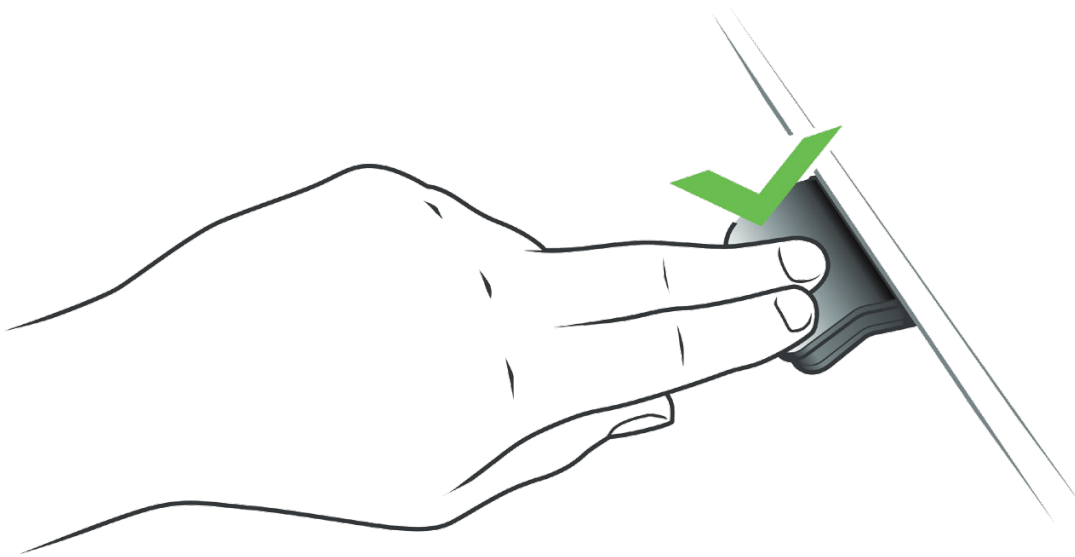


Figure 2: Press and hold the DPG1K to make the desk drive down

Operation of the DPG1B/C

The desk panel is operated by tilting; Tilt and hold the DPG up to make the desk drive up, press and hold the DPG down to make the desk drive down. Release the DPG, when you have reached your requested position.

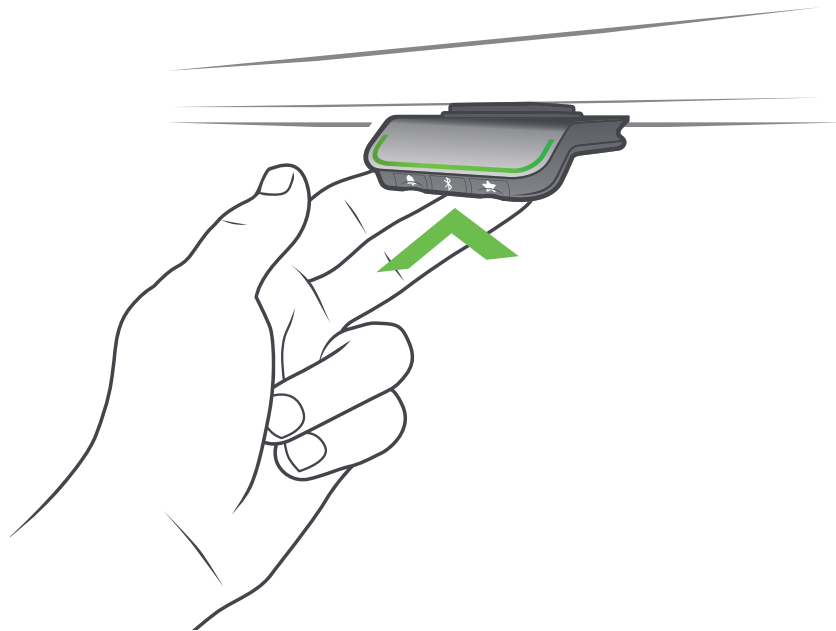


Figure 1: Tilt and hold the DPG to make the desk drive

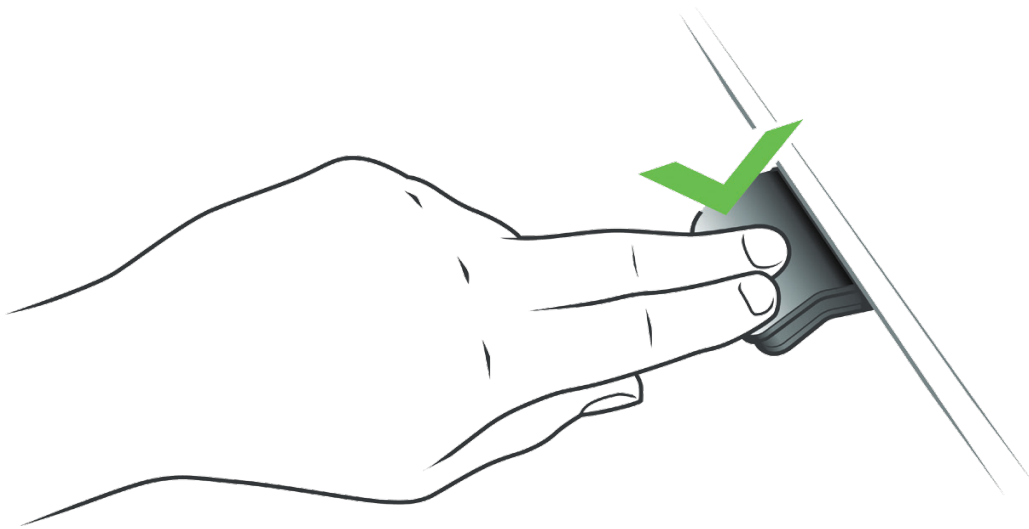


Figure 2: Press and hold the DPG to make the desk drive down

Storing the memory positions


Memory positions 1 and 2

The DPG1B/C have a "store memory" button to the right symbolised with a star.

Adjust the desk to a preferred position and press the "Star"-button for 2 seconds. The light strip will now blink white two times to indicate that saving the position is in progress. When the light strip becomes static white, the position is saved. In the DPG1C: The display will indicate the saved position with a star and a number of the position. The number inside the star is according to in which order the positions are saved; First position saved; A star with a "1" inside. This is how to save the 2 memory positions "1" and "2". If the user adjusts the desk to another position and saves the position, it will overwrite the memory position 1 or 2 closest to the current position.

DPG1C: Memory positions 3 and 4


The DPG1C features 4 memory positions. Pressing the "Star" shortly will make the display show the 4 memory positions: A "star" with the number next to it. Now the user can toggle through these 4 memory positions in the display and choose which one to save the current position as. E.g. a user wants to store the current position as memory 3: Press the "star"-button and toggle to the "star" with "3" next to it. Now use the same storing procedure as described above: Press the star for 2 seconds and the memory position is saved.

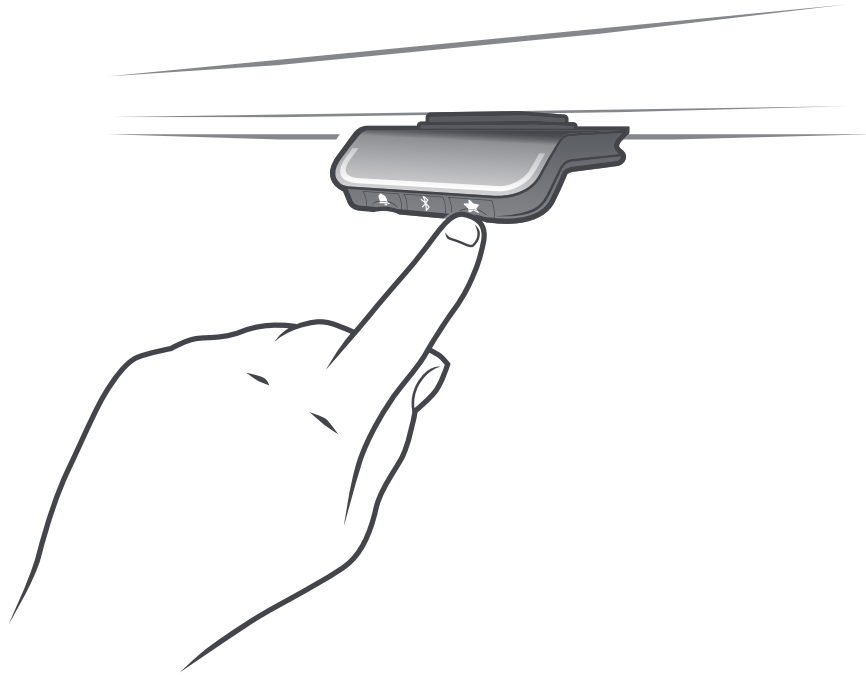

Driving to memory positions

After storing the memory positions, the positions can be reached simply by tilting the DPG. Tilt and hold - when a stored position is reached, the desk stops. This way the user can easily change between sitting and standing position without looking at the DPG in the meantime. While driving the display in the DPG1C will show the height of the desk. When a position is reached, this will be indicated in the display by the star and the memory number.

The DPG will stop at all stored memory positions, which means up to 4 different positions (in DPG1C) during the stroke length of the desk. When the desk stops at a memory position, the user can continue to tilt the DPG for 1 second and the desk will move past the memory position and continue in the direction of the tilt. Furthermore, when the desk stops at a memory position, the user can release the DPG and tilt again immediately to move past a memory position.

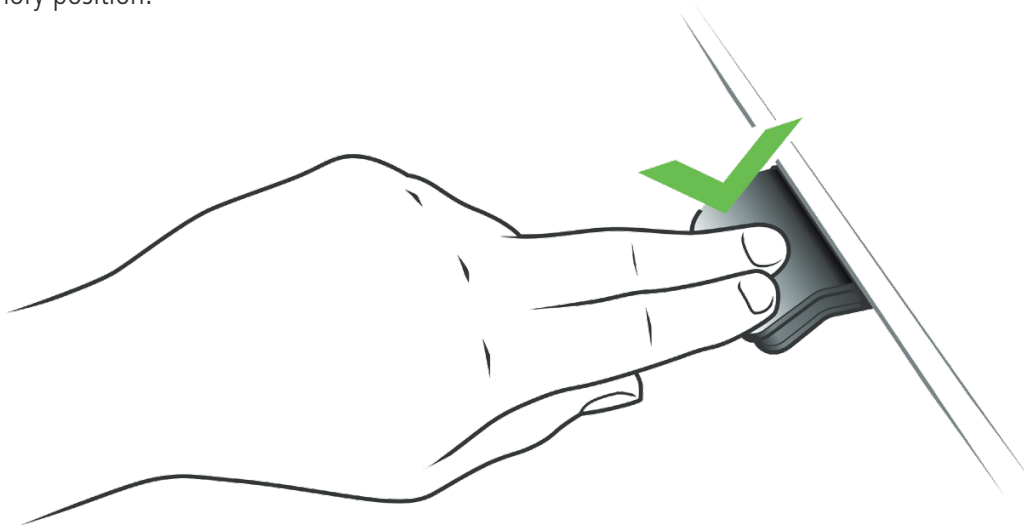

Driving to memory positions (Automatic drive enabled, only possible for "Full version")

After storing the memory positions, the positions can be reached simply by tilting the DPG. Double tap on the DPG to let the desk adjust automatically to the first position in the direction of the double tap. Simply tap the DPG again to stop the driving of the desk.

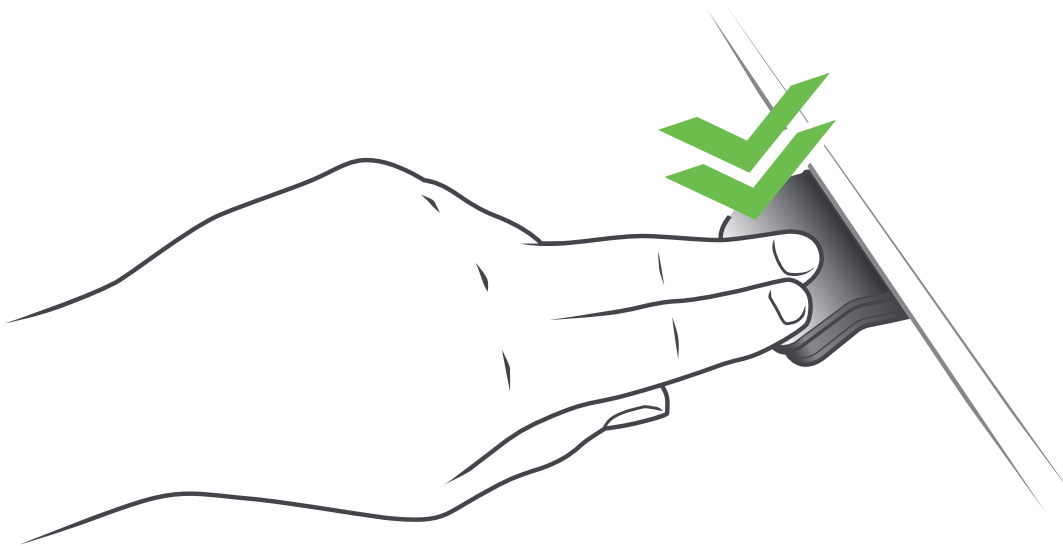


Figure 3: Double tap to adjust the desk to a memory position automatically

Erase memory positions

Pressing the "Memory" button for 8 seconds will erase all saved memory positions. In the DPG1C: The display will make a countdown and the light strip will blink red to indicate when the action is completed.



Reminder


Setting the reminder interval

The DPG has a "Reminder" button to the left symbolised with a bell. Pressing this button will adjust the interval of how often to get reminders to change position. Each white block represents an interval and the 3 standards are:


- Interval 1: Reminder after 55 minutes sitting
- Interval 2: Reminder after 50 minutes sitting
- Interval 3: Reminder after 45 minutes sitting

The default interval chosen is reminding after 55 mins, which means one white block will be lit up. Simply toggle through the intervals by pressing the bell button. When no white blocks are lit up, the reminder is turned off.


Through the apps, it is possible to personalise the three intervals to custom values.

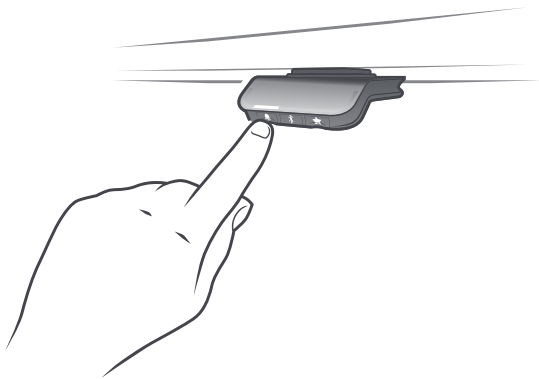


Interval 1: Reminder after 55 minutes sitting

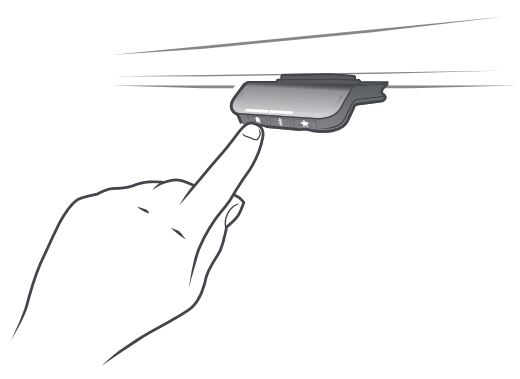

Interval 2: Reminder after 50 minutes sitting

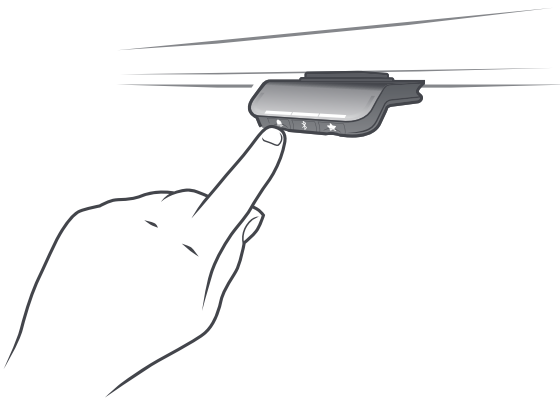

Interval 3: Reminder after 45 minutes sitting

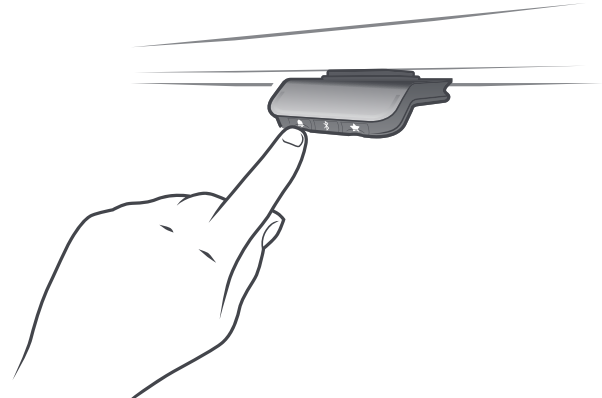

Reminder off

Reminder reset

It is possible to reset the reminder to default values by pressing the "bell" symbol for 8 seconds. The display will make a countdown and the light strip will blink red to indicate when the action is completed.

Light strip reminder

The light strip is a thin line of LED light shining through the surface of the DPG. The light strip is intended to indicate the status of the desk user. The status depends on the reminder interval chosen. When the user is in position in an appropriate amount of time according to the interval, the light strip calmly pulsates green. When the sitting interval runs out, the calm pulsating green turns into fast pulsating orange for 1 min hereafter static orange – this is an indication to the user to adjust the desk to standing height. In standing height, the light strip will pulsate green until a potential time out. When the desk is adjusted back to sitting position, the light strip will pulsate green until the reminder goes off again.

After 4 hours without any action, the light strip will time out. When the DPG is tilted, the green light will come back on.



Please be aware; When the light strip is enabled for reminders, the DPG is no longer in ZERO mode as long as the light is on/active.



Figure 4: Pulsating green light strip indicates everything is okay



Figure 5: Pulsating orange light strip indicates the user needs to change position

Factory reset

Pressing and holding the "Memory" and "Reminder" for 8 seconds will set the DPG to factory default. The light strip will flash red 3 times. In the DPG1C: After 3 seconds of the command, the display will light up: It has an arrow with a countdown [seconds] to the factory reset and it says RESET.

DPG1C

Display

The DPG1C has an OLED display, which shows the height during drive of the desk and many other texts to guide the user.

Adjust initial height of the desk

If the height shown in the display is not correct the height can be adjusted. When pressing the "Reminder" and the "Bluetooth" button on the DPG1C at the same time in 5 seconds; the height in the display starts to blink. When tilting the DPG1C the height in the display changes without moving the desk. Tilt up to increase the height, tilt down to decrease the shown height in the display. Pressing any button will confirm the choice or wait for 10 seconds and the confirmation happens automatically.

Switching between centimetre and inch

Pressing the "Memory" and the "Bluetooth" button on the DPG1C at the same time for 5 seconds; the current measurement unit blinks. When e.g. CM is blinking and the user wants to change to inch; Tilt the DPG once and it now says "Inch" in the display. Pressing any button will confirm the choice or wait for 10 seconds and the confirmation happens automatically.

Error codes

The DPG1C shows error codes in case of errors in the system. The most common errors loop between the error code (EXX) and the cause, check the code below:

Error codes in CBD6S	Cause
E01	INITIALISATION